

# COBRA DS 0080/0160 G

Dry screw vacuum pumps

**PFEIFFER**   
VACUUM+FAB SOLUTIONS

Part of the **BUSCH** GROUP



## High performance

Advanced screw design, excellent running qualities, perfectly suited for chemical vapor deposition, rapid thermal processing or atomic layer deposition

## Efficient

Low cost of ownership, minimal maintenance, long service intervals, high uptime, efficient indirect water cooling, high hydrogen throughput

## Compact

Fit-in-place design, directly mounted canned motor


# COBRA DS 0080/0160 G

Dry screw vacuum pumps

**PFEIFFER**  
VACUUM+FAB SOLUTIONS

Part of the **BUSCH** GROUP


Dimensional drawing

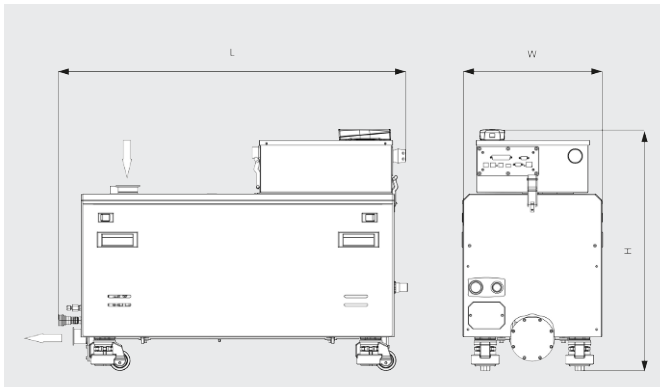

Pumping speed

Air at 20°C. Tolerance:  $\pm 10\%$

— 50 Hz ..... 60 Hz

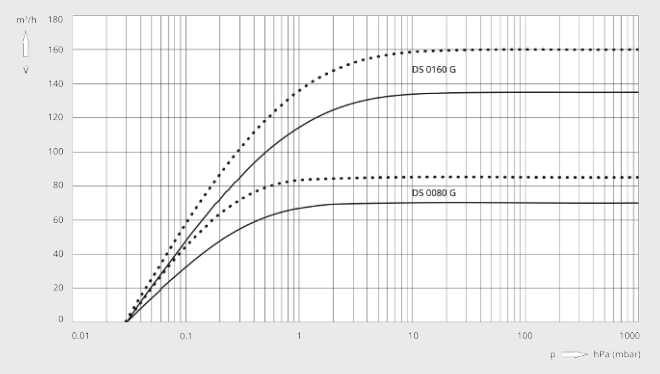

|                                             | COBRA DS 0080 G                            | COBRA DS 0160 G                            |
|---------------------------------------------|--------------------------------------------|--------------------------------------------|
| Nominal pumping speed                       | 70 / 85 m³/h (50 / 60 Hz)                  | 140 / 160 m³/h (50 / 60 Hz)                |
| Ultimate pressure                           | 0.03 hPa (mbar) (50 / 60 Hz)               | 0.03 hPa (mbar) (50 / 60 Hz)               |
| Nominal motor rating                        | 4.0 / 4.4 kW (50 / 60 Hz)                  | 5.5 / 6.6 kW (50 / 60 Hz)                  |
| Power consumption at ultimate pressure      | 2.6 / 3.2 kW (50 / 60 Hz)                  | 4.3 / 5.2 kW (50 / 60 Hz)                  |
| Nominal motor speed                         | 3000 / 3600 min <sup>-1</sup> (50 / 60 Hz) | 3000 / 3600 min <sup>-1</sup> (50 / 60 Hz) |
| Sound pressure level (ISO 2151), KpA = 3 dB | < 62 dB(A) (50 / 60 Hz)                    | < 68 dB(A) (50 / 60 Hz)                    |
| Water consumption                           | 4.0 l/min (50 / 60 Hz)                     | 4.0 l/min (50 / 60 Hz)                     |
| Nitrogen consumption                        | 0 – 75 l/min (50 / 60 Hz)                  | 0 – 75 l/min (50 / 60 Hz)                  |
| Weight approx.                              | 276 kg                                     | 338 kg                                     |
| Dimensions (L x W x H)                      | 865 x 385 x 667 mm                         | 975 x 425 x 697 mm                         |
| Gas inlet / outlet                          | DN 40 / DN 40                              | DN 50 / DN 40                              |

Technical data / Specifications may vary depending on configuration, selected accessories, installation, and operating conditions.

## DO YOU WANT TO KNOW MORE?

Get in touch with us directly!



CONTACT FORM